

RF 4 Channel LED Remote Controller [0147]

Brightness Adjusting

1. Technical Parameters (remote control)



- ① Power supply: AAA battery * 2pcs
- ② Cover material: ABS

2. Technical Parameters (controller)

- ① Working voltage: DC12V-24V
- ② Output control: 1 circuit
- ③ Control current: 6mA/circuit
- ④ Dimension: L85*W45*H22mm
- ⑤ Receiving range: 30meters

3. Functions of Keys

4x Zone

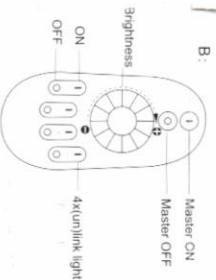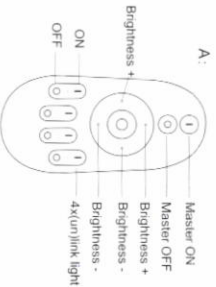

4. How to use:


① Brightness adjusting:

Remote A: to adjust all controllers, first press "Master ON" or to adjust individual controllers, then press "Zone ON", secondly set the adjustment for brightness.

Remote B: rotating the wheel from left to right, brightness up, from right to left, brightness down.

Brightness: 100%-1%, 50 grades to adjust.

2. Night light mode: for individual controllers, press and hold the "Zone OFF" from one of the 4 Zones. For all controllers, press and hold "Master OFF". The lights now consume only 0.4watts.
3. Resume function: The previous settings will be resumed while power on again!
4. Matching Code: Press one of the "Zone ON" buttons one time within 3 seconds when power on again, the light will blink 3 times if matching is successful;
5. Clearing Code: Press one of the "Zone ON" buttons five times quickly within 3 seconds when power on again, the light will blink ten times if clearing is successful;
6. Grouping: You can add an endless numbers of controllers to a zone on the 4 channel remote by code-matching to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

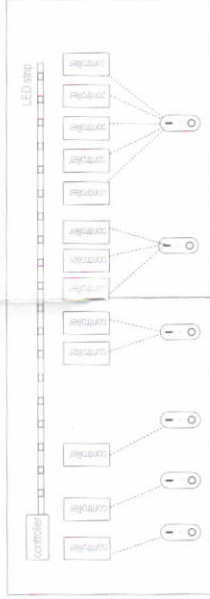

Caution: one controller can connect with up to four different remotes;

5. Connecting Chart:

